

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



# Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China










## FineAdjust Applicator Specification Sheet Order No. 63901-4100

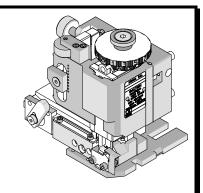

#### **FEATURES**


- Directly adapts to most automatic wire processing machines
- Quick punch removal with the push of a button for fast and easy tooling change
- Applicator designed to industry standard mounting and shut height 135.80mm (5.346")
- Quick set-up time; plus the crimp height, track and feed adjustments can be set without removing the applicator from the press
- Fine adjustment allows users to achieve target with little effort by adjusting in increments of .015mm (.0006") for conductor crimp height and .063mm (.0025") for insulation height
- Independent adjustment rings allow users to quickly adjust the conductor or insulation crimp height without affecting each other

#### **SCOPE**

<u>Products</u>: Projector Lamp Plug and Receptacle Terminal, 18-22 AWG.

Terminal	Terminal		Wire Size		Insulation Diameter		Strip Length	
Series No.	Order No.		AWG	mm²	mm	ln.	mm	ln.
78036	78036-2001	78036-2005	18-22	0.80-0.35	2.06-3.85	.081152	3.00-4.00	.118158
78037	78037-2001	78037-2005	18-22	0.80-0.35	2.06-3.85	.081152	3.00-4.00	.118158

#### **DEFINITION OF TERMS**

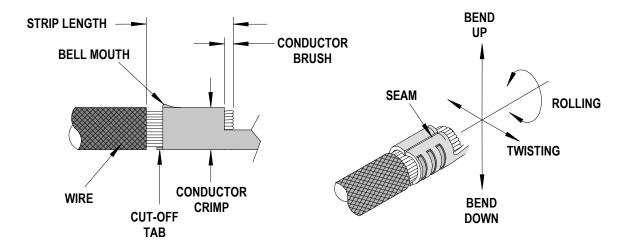

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Doc No: ATS-639014100 Release Date: 06-25-09 **UNCONTROLLED COPY** Page 1 of 5 Revision: C Revision Date: 07-28-09

### **CRIMP SPECIFICATION**

Terminal Series No.	Bell n	nouth	Cut-off Tab	Maximum	Conductor Brush	
Terminal Series NO.	mm	ln.	mm	ln.	mm	ln.
78036	0.05-0.30	.002012	0.15	.006	0.20-1.00	.008039
78037	0.05-0.30	.002012	0.15	.006	0.20-1.00	.008039

Terminal Series No.	Bend up Bend down		Twist	Roll	Punch Width mm (Ref) Conductor		Seam	
	Degree (Max)		Degree (Max)		mm	ln	Seam shall not be open and no wire allowed out	
78036	3	3	3	5	2.00	.079	of the crimping area	
78037	3	3	3	5	2.00	.079	or the chimping area	

After crimping, the conductor profile should measure the following.

Torminal	Wire Size	Actual mm²		Pull Force				
Terminal Series No.			Crimp	Height	Crimp Wi	dth (Ref.)	Minimum	
Selles No.			mm	ln.	mm	ln.	N	Lb.
	18 AWG	0.80	1.30-1.40	.051055	2.00	.079	107.87	24.25
78036	20 AWG	0.50	1.15-1.22	.045048	2.00	.079	58.84	13.23
	22 AWG	0.35	1.07-1.15	.042045	2.00	.079	39.23	8.82
78037	18 AWG	0.80	1.30-1.40	.051055	2.00	.079	107.87	24.25
	20 AWG	0.50	1.15-1.22	.045048	2.00	.079	58.84	13.23
	22 AWG	0.35	1.07-1.15	.042045	2.00	.079	39.23	8.82

### **Tool Qualification Notes:**

The above specifications are guidelines to an optimum crimp.


**UNCONTROLLED COPY** Doc No: ATS-639014100 Release Date: 06-25-09 Page 2 of 5 Revision: C Revision Date: 07-28-09

## **PARTS LIST**

FineAdjust Applicator 63901-4100									
Item	Order No								
Perishable Tooling									
	63901-4170	63901-4170	Tool Kit (All "Y" Items)	REF					
1	63444-2017	63444-2017	Conductor Punch	1 Y					
2	63455-0084	63455-0084	Conductor Anvil	1 Y					
3	63443-0035	63443-0035	Front Cut-Off Plunger	1 Y					
4	63443-0036	63443-0036	Front Plunger Retainer	1 Y					
			Components						
5	11-18-4083	60707-8	Feed Guide	1					
6	63443-3160	63443-3160	Front Plunger Striker	1					
7	63443-0009	63443-0009	Front Scrap Chute	1					
8	63443-0024	63443-0024	Key	1					
9	63443-0090	63443-0090	Wire Stop	1					
10	63443-1718	63443-1718	18.80mm Height Spacer	1					
11	63443-2215	63443-2215	15.00mm Coarse Spacer	1					
12	63443-2314	63443-2314	3.70mm Fine Spacer	1					
13	63443-6004	63443-6004	Rear Cover	1					
14	63454-0101	63454-0101	Punch Spacer	1					
15	63700-0539	63700-0539	Cut-Off Plunger Spring	1					
Frame									
16	63800-4901	63800-4901	Тор	1					
17	63801-3281	63801-3281	Base	1					
18	63801-4650	63801-4650	Track	1					
		H	lardware						
19	N/A	N/A	M3 by 6 Long SHCS	2**					
20	N/A	N/A	M3 by 6 Long FHCS	1**					
21	N/A	N/A	M4 by 6 Long SHCS	2**					
22	N/A	N/A	M4 by 12 Long BHCS	2**					
23	N/A	N/A	M4 by 50 Long SHCS	2**					
24	N/A	N/A	M5 by 12 Lg SHCS	1**					
25	N/A	N/A	#10-32 by 3/8"Long Flat Point SSS	1**					
26	N/A	N/A	#10-32 Hex Jam Nut	1**					
*	** Available from an industrial supply company such as MSC (1-800-645-7270).								

**UNCONTROLLED COPY** Doc No: ATS-639014100 Page 3 of 5 Release Date: 06-25-09 Revision Date: 07-28-09

Revision: C

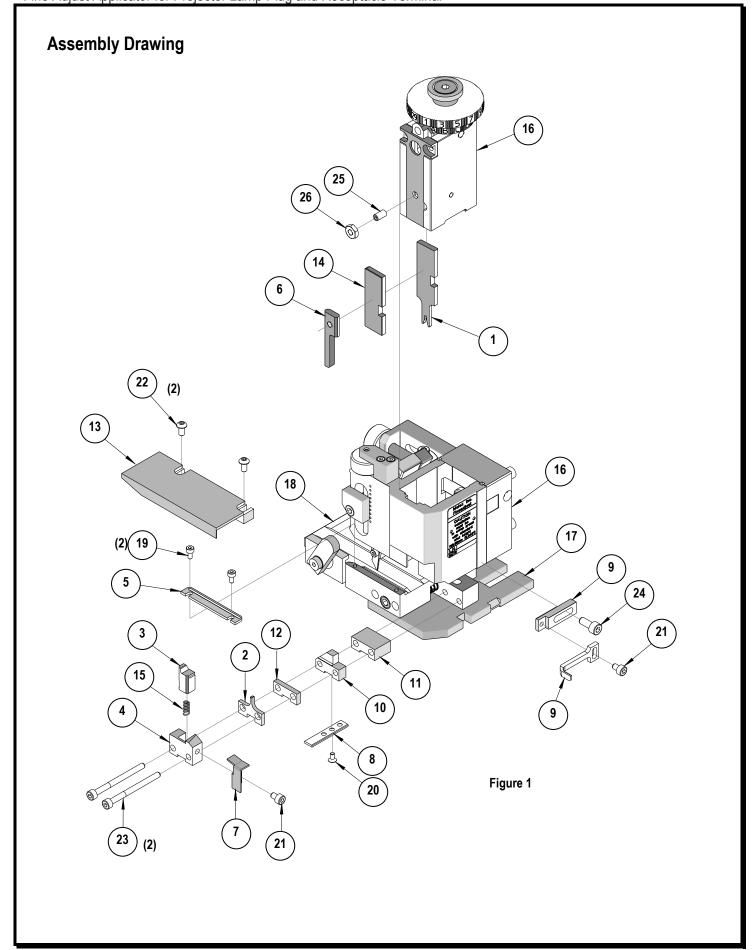

Doc No: ATS-639014100 Revision: C Release Date: 06-25-09 Revision Date: 07-28-09

#### NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press and Applicator before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. Wear safety glasses at all times.
- 5. For recommended maintenance refer to the FineAdjust Manual.

CAUTION: This applicator should only be used in a press with a shut height of 135.8mm (5.346"). Tooling damage could result at a lower setting.

**CAUTION**: To prevent injury never operate this Applicator without the guards supplied with the press or wire-processing machine in place. Reference the press or wire processing manufacturer's instruction manual.

**CAUTION**: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com

Far East North Headquarters Far East South Headquarters European Headquarters Corporate Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com

Jurong, Singapore 65-6-268-6868 fesinfo@molex.com

Munich, Germany 49-89-413092-0 eurinfo@molex.com

2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

**UNCONTROLLED COPY** Doc No: ATS-639014100 Release Date: 06-25-09 Page 5 of 5 Revision: C Revision Date: 07-28-09